



[www.jbctools.com](http://www.jbctools.com)

## INSTRUCTION MANUAL



 
# Rework Hand Support

Ref. RHT-A

# Packing List

The following items are included:

- Tool Arm** ..... 1 unit
- Flange** ..... 1 unit  
Ref. 0017524
- Shaft** ..... 1 unit



- Flange Screw** ..... 3 u  
Ref. 0017548
- Flange Nut** .....3 u  
Ref. 0892422
- Flange Washer** .. 3 u  
Ref. 0919480
- Allen key** ..... 1 unit  
Ref. 0013609




- Height adj. Knob**..... 1 unit  
Ref. 0023991
- Allen screw**..... 1 unit  
Ref. 0017057
- Manual**..... 1 unit  
Ref. 0023893




## Assembly

### 1. Fixing the Flange

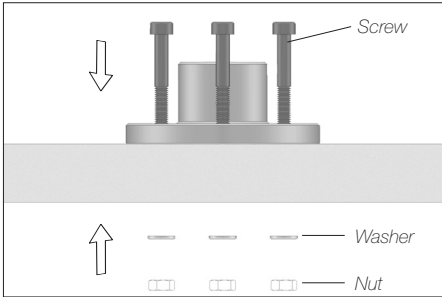

Fix the flange on your work table with the supplied screws, nuts and washers.

### 2. Setting up the Tool Arm

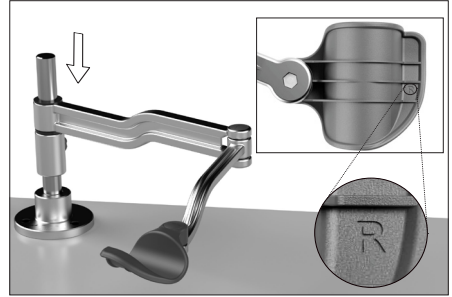


Fit the tool arm onto the base and tighten the screw.

The tool arm position should be like the image according with the letter back of the arm support.

## Height Adjustment

The RHT-A Arm allows adjustment for different heights according to your work needs through the vertical axis.

Slide the arm to the appropriate height and secure by tightening the knob to guarantee stability.

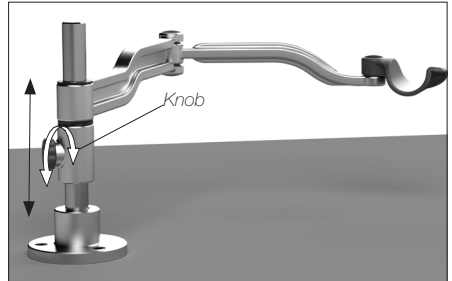


## Maintenance

- Check periodically that the RHT-A is clean, especially the sliding parts and the shaft.
- Use a damp cloth when cleaning. Alcohol can only be used to clean the metal parts.
- Replace any defective damaged parts. Use original JBC spare parts only.




Not leave up the RHT-A over the PH when PH is working.

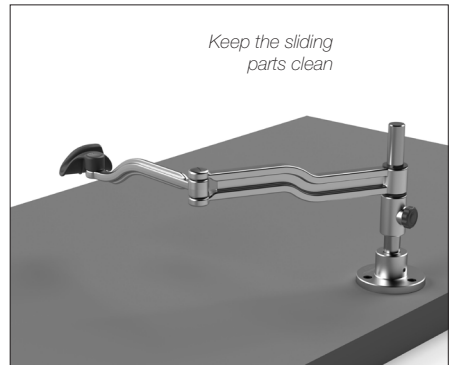


# Work Position Adjustment

The RHT-A arm allows adjustment for different positions according to your work needs.  
The articulated arm covers all work areas.

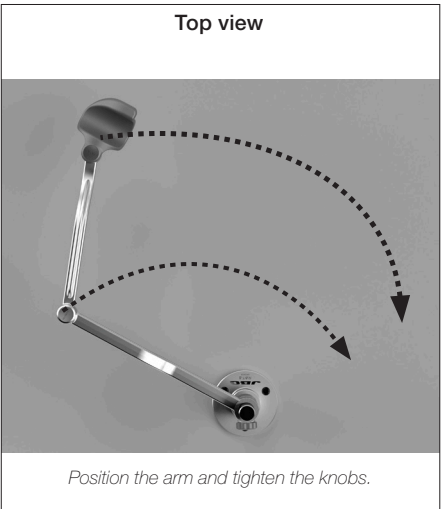


See the work correct position of the hand in the following images.

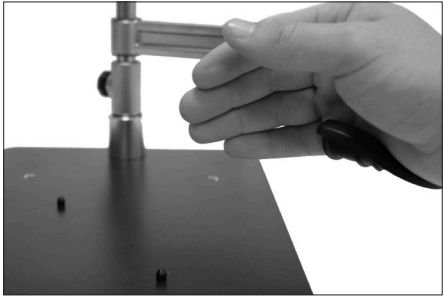

## Accessories

Ideal for working with JBC's Hot Air stations and a Preheater.

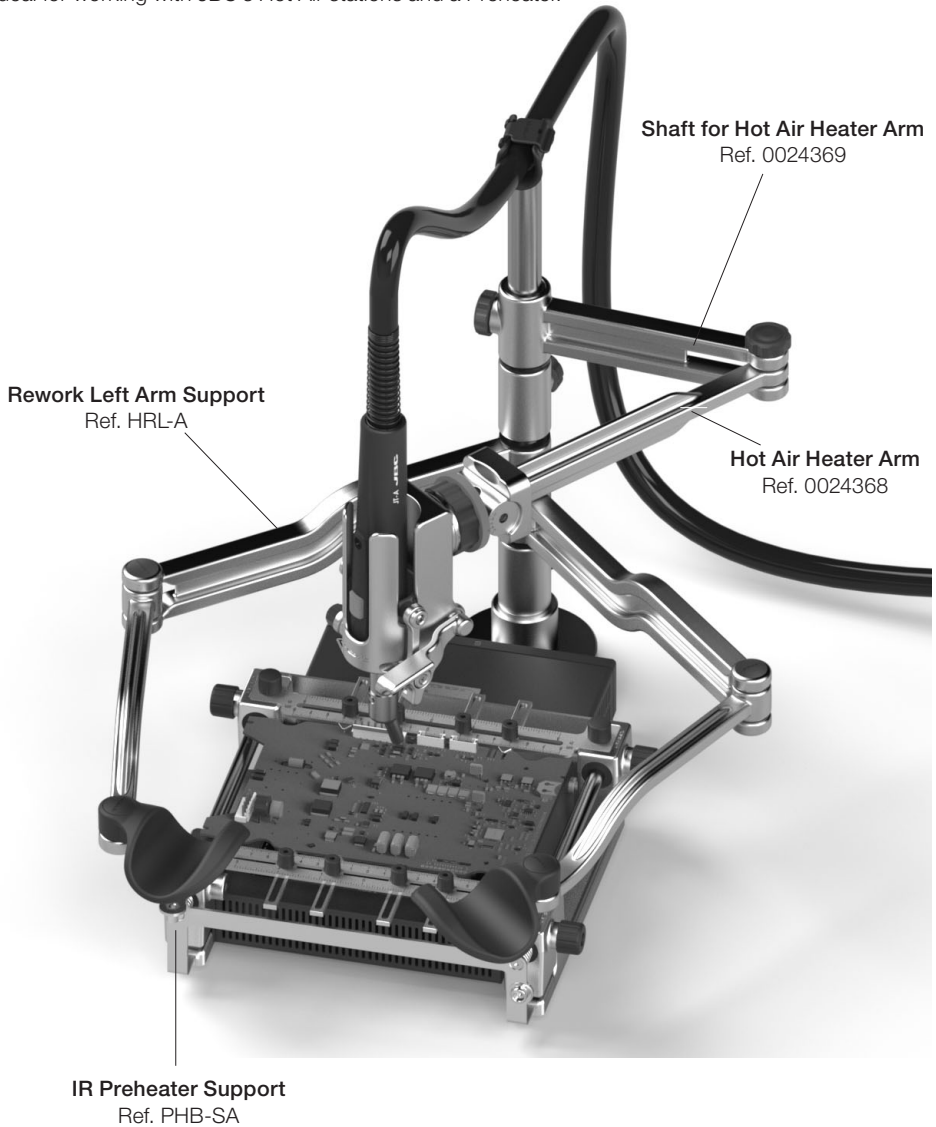

## Safety



**It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosions.**

- Do not use the equipment for any purpose other than PCB rework. Incorrect use may cause fire.
- The temperature of accessible surfaces may remain high after the unit is turned off. Handle with care.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Not leave up the arms directly above heat surfaces.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight as well as persons with reduced physical, sensory or mental capabilities or lacking experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

## Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## Specifications

- Total weight: 1,5 kg (33.1 lb)
- Base dimensions: 270 x 410 mm (10.6 x 16.2 in)
- Height: 205 mm (8.1 in)
- Arm lenght: 498,1 mm (19.6 in)
- ESD safe connector

Complies with CE standards  
ESD Safe

# JBC

### Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

**Get 1 extra year JBC warranty by registering here:**  
**<https://www.jbctools.com/productregistration/>**  
**within 30 days of purchase.**



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



**[www.jbctools.com](http://www.jbctools.com)**